

Alarm Status Bar

Published on Greensea Knowledge Base (<http://localhost:8888/kb2017>)

Alarm Status Bar

The Alarm Status Bar is on the far right of the Static Bar next to the Greensea logo. The Alarm Status Bar displays alarm notifications. Not all alarms active may be seen here though if there are many active alarms. The Alarm Status Bar also provides operators the ability to acknowledge all alarms by clicking the Acknowledge button or acknowledge individual alarms by clicking the alarm notification.

Category: [Workspace - Flight View](#) [1]

Applies to: [Balefire Basic](#) [2]

Article ID: 125

Source URL: <http://localhost:8888/kb2017/alarm-status-bar>

Links

[1] <http://localhost:8888/kb2017/main-categories/workspace-flight-view>

[2] <http://localhost:8888/kb2017/applies/balefire-basic>