

Doppler Velocity Log (DVL) Data

The Doppler Velocity Log (DVL) section of the [Vehicle Sensors](#) [1] screen displays the following information:

Field	Description
Bottom Lock	Illuminates to notify the operator when bottom lock has been established.
Timestamp	Unix time stamp of the most current DVL reading.
Forward Velocity	The rate of travel of the vehicle in the forward direction.
Starboard Velocity	The rate of travel of the vehicle in the starboard direction.
Down Velocity	The rate of travel of the vehicle in the downward direction.

Category: [Workspace - Diagnostics](#) [2]

Applies to: [Balefire Basic](#) [3]

Article ID: 137

Source URL: <http://localhost:8888/kb2017/doppler-velocity-log-dvl-data>

Links

[1] <https://greenseainc.com/kb/vehicle-sensors-0>

[2] <http://localhost:8888/kb2017/main-categories/workspace-diagnostics>

[3] <http://localhost:8888/kb2017/applies/balefire-basic>