

Executing a Mission

To execute a mission, it must be pushed to the vehicle and then activated. The mission is pushed to the vehicle by selecting the **Push Mission To Vehicle button** from the Mission tab of the navigation control. Once the mission has been given to the vehicle, it is activated and deactivated by the **Waypoint Following** button within the Autopilot Control. If the waypoints are modified they must be pushed to the vehicle again before the vehicle will begin following the new instructions.

Category: [Workflow - Mission Planning & Executing](#) [1]

Applies to: [Balefire Basic](#) [2]

[Mission View](#) [3]

Article ID: 32

Source URL: <http://localhost:8888/kb2017/executing-mission>

Links

[1] <http://localhost:8888/kb2017/main-categories/workflow-mission-planning-executing>

[2] <http://localhost:8888/kb2017/applies/balefire-basic>

[3] <http://localhost:8888/kb2017/applies/mission-view>