

Health and Status Bar

The Health and Status Bar is in the middle of the Static Bar and provides aggregated communication status for critical subsystems including the Alarm Manager, the Signal Mapper, openCMD, openINS, the joybox, and any vehicle payload control system. Green LEDs indicate valid and reliable communications while red LEDs indicate invalid and/or unreliable communications.

Category: [Workspace - Flight View](#) [1]

Applies to: [Balefire Basic](#) [2]

Article ID: 124

Source URL: <http://localhost:8888/kb2017/health-and-status-bar>

Links

[1] <http://localhost:8888/kb2017/main-categories/workspace-flight-view>

[2] <http://localhost:8888/kb2017/applies/balefire-basic>