

Map Tools Menu

Published on Greensea Knowledge Base (<http://localhost:8888/kb2017>)

Map Tools Menu

/*-->*/

The navigation tools menu contains eight tabs used to place markers, log data, and define important navigational settings. The tabs contain specific details for Waypoints, Map Configuration, Markers, Man Overboard (MOB) markers, Logging, Playback, Mission and Position/Declination. The Map Tools also provide display settings for the Map View.

The screenshot displays the 'Position / Declination' tab within a software interface. The top navigation bar includes tabs for Waypoints, Map Config, Markers, Man Overboard, Logging, Playback, Mission, and Position / Declination. The main area is divided into two sections: 'Position' and 'Declination'. The 'Position' section features a text input field with the placeholder 'Enter desired position in DD, DMS or UTM here'. Below this field are two buttons: 'Copy Ship's Position' on the left and 'Update ROV Position' on the right. To the right of the input field, there is a small text box containing coordinates: 'eg: 44.405833 - 72.992803', 'eg: 44d24'18.115"N 72d59'34.112"W', and 'eg: 18N 659827 4918820', followed by the instruction '(right click on map to copy position)'. The 'Declination' section shows 'Current:' and 'Commanded:' values, both set to '0.00°'. Below these are two buttons: 'Lookup Declination' and 'Update Vehicle'.

Category: [Workspace - Flight View](#) [1]

Applies to: [Balefire Basic](#) [2]

[Mission View](#) [3]

Article ID: 17

Source URL: <http://localhost:8888/kb2017/map-tools-menu>

Links

[1] <http://localhost:8888/kb2017/main-categories/workspace-flight-view>

[2] <http://localhost:8888/kb2017/applies/balefire-basic>

[3] <http://localhost:8888/kb2017/applies/mission-view>