

Map View

/*-->*/

The Map View is the display screen for the 2D chart plotting system. It provides visual display of the vehicle's position and ship's position, as well as support for charts, creating map elements, and working with the data on the map. Additionally, the Map View supports most common chart plotting functions and utilities common with other 2D chart plotting software.

This view can be right-clicked to receive the following menu.

Button	Description
Go to Position	/*-->*/ Comms are not established. Buttons are unclickable in this state.
Add Waypoint	/*-->*/ Comms are established. Button is clickable and ready to go.
Add Marker	Adds a marker.
Clear History	Clears the vehicle trace.
Copy Cursor Position to Clipboard	/*-->*/ Copies the cursor's position to the clipboard. Once the position is copied to the clipboard it can be pasted elsewhere.

Category: [Workspace - Flight View](#) [1]

Applies to: [Balefire Basic](#) [2]

[Mission View](#) [3]

Article ID: 9

Source URL: <http://localhost:8888/kb2017/map-view>

Links

[1] <http://localhost:8888/kb2017/main-categories/workspace-flight-view>

[2] <http://localhost:8888/kb2017/applies/balefire-basic>

[3] <http://localhost:8888/kb2017/applies/mission-view>