

Navigation Bar

/*->*/



The Navigation Bar is where shortcuts to Flight View, Alarm Manager, Data Plotter, Signal Mapper, and Device Diagnostics are located. The Navigation bar is located in the top left corner of the workspace and facilitates quick and easy navigation about the workspace.

Tags: [Navigation Bar](#) [1]

Category: [Workspace - Flight View](#) [2]

Applies to: [Balefire Basic](#) [3]

Article ID: 46

Source URL: <http://localhost:8888/kb2017/navigation-bar>

Links

[1] <http://localhost:8888/kb2017/tags/navigation-bar>

[2] <http://localhost:8888/kb2017/main-categories/workspace-flight-view>

[3] <http://localhost:8888/kb2017/applies/balefire-basic>