

Navquest Configuration

Configuration has to be done using windows utility.

Set baud rate 115200 (power cycle and check comms after?)

Set output format 'WH300 PD6 compatible ASCII output'

Set output mode 'Power-on Continuous'

power off [DVL](#) [1] - DO NOT CLOSE APPLICATION

close application

test in terminal

Take a screenshot.

Source URL: <http://localhost:8888/kb2017/navquest-configuration-0>

Links

[1] <http://greenseainc.com/kb/lexicon/1#dvl>