


Pan

Published on Greensea Knowledge Base (<http://localhost:8888/kb2017>)

Pan

Selecting Pan allows the vehicle operator to change map views. This feature allows the vehicle to be panned off the screen as long as the Center On button is not selected. If this button is selected the vehicle must remain the center of the map view.

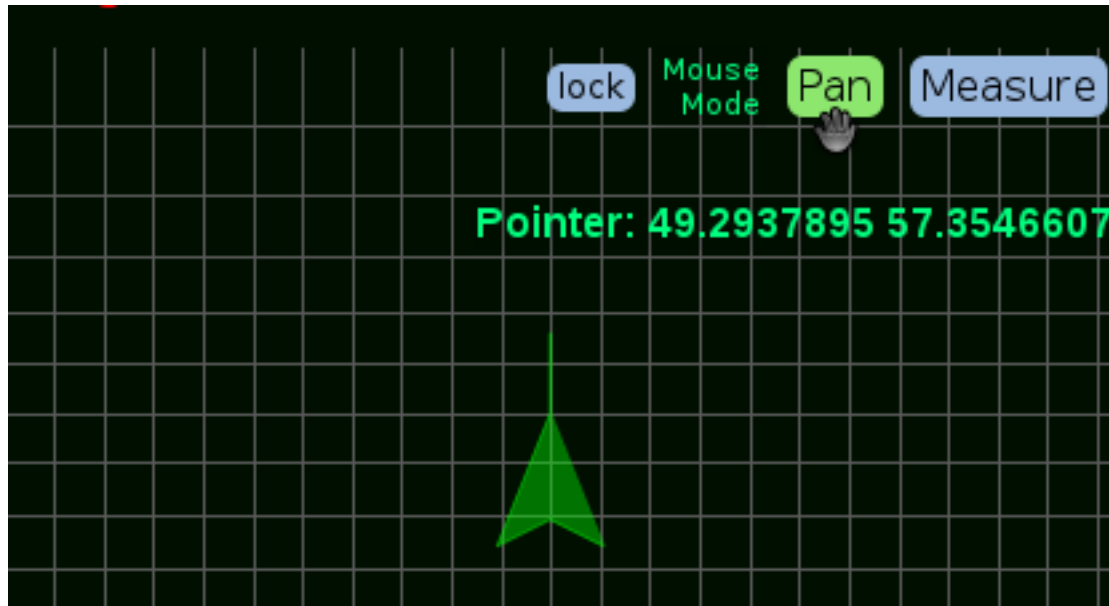

Source URL: <http://localhost:8888/kb2017/pan-0>