

ROV Turns Guage

The ROV Turns gauge tells the operator how many times the vehicle has executed a full 360° rotation about its z-axis. A positive value indicates the vehicle has turned in the positive psi direction, while a negative value indicates a turn in the negative psi direction. If the operator wishes to reset the turns counter, the **zero** button commands it back to 0.

Tags: [rov turns guage](#) [1]

[guages](#) [2]

Category: [Workspace - Flight View](#) [3]

Applies to: [Balefire Basic](#) [4]

Article ID: 2

Source URL: <http://localhost:8888/kb2017/rov-turns-guage>

Links

[1] <http://localhost:8888/kb2017/tags/rov-turns-guage>

[2] <http://localhost:8888/kb2017/tags/guages>

[3] <http://localhost:8888/kb2017/main-categories/workspace-flight-view>

[4] <http://localhost:8888/kb2017/applies/balefire-basic>