

Testing Digital Signal Scaling

Published on Greensea Knowledge Base (<http://localhost:8888/kb2017>)

Testing Digital Signal Scaling

To test a signal that is fully mapped and scaled, open the Signal Viewer page in the Greensea Workspace. Select the Output Channel (for example, OPENMNGR_DAO_CMD) and highlight the output signal (for example, U_DAO_JOY_X) that is to be tested. Verify that the output is no longer "true" or "false" but "0" or "100".

Category: [Workflow - Signal Mapper](#) [1]

Article ID: 152

Source URL: <http://localhost:8888/kb2017/testing-digital-signal-scaling>

Links

[1] <http://localhost:8888/kb2017/main-categories/workflow-signal-mapper>