

Waypoint Tolerance

The tolerance of a waypoint is the distance to where the target has been met. The minimum distance allowed is 0.1 meters, to where the waypoint is recognized as met. The tolerance is completely adjustable above the .1 meter mark.

Tags: [tolerance](#) [1]

[waypoint](#) [2]

Category: [Workflow - Mission Planning & Executing](#) [3]

Applies to: [Balefire Basic](#) [4]

[Mission View](#) [5]

Article ID: 141

Source URL: <http://localhost:8888/kb2017/waypoint-tolerance>

Links

[1] <http://localhost:8888/kb2017/tags/tolerance>

[2] <http://localhost:8888/kb2017/tags/waypoint>

[3] <http://localhost:8888/kb2017/main-categories/workflow-mission-planning-executing>

[4] <http://localhost:8888/kb2017/applies/balefire-basic>

[5] <http://localhost:8888/kb2017/applies/mission-view>