

Zero Button

Published on Greensea Knowledge Base (<http://localhost:8888/kb2017>)

Zero Button

The **Zero** button calibrates the vehicle depth relative to a specific depth. If you want your zero depth to be set to something other than the default reading, press **Zero** and the scale will recognize the current vehicle read as zero.

Source URL: <http://localhost:8888/kb2017/zero-button-0>