

Zone Enabled

Published on Greensea Knowledge Base (<http://localhost:8888/kb2017>)

Zone Enabled

"I click Zone Enabled and don't see my zone."

The first thing to check is the grid size. Is the zone radius small enough to not be displayed? The next check is the zone color. Does the zone color blend with the background? Finally, what is the zone opacity setting? Is the zone transparent?

Category: [Workspace - Flight View](#) [1]

Applies to: [Balefire Basic](#) [2]

[Mission View](#) [3]

Article ID: 144

Source URL: <http://localhost:8888/kb2017/zone-enabled>

Links

[1] <http://localhost:8888/kb2017/main-categories/workspace-flight-view>

[2] <http://localhost:8888/kb2017/applies/balefire-basic>

[3] <http://localhost:8888/kb2017/applies/mission-view>