openCMD Configuration

openCMD is the openSEA application used to calculate the low-level single degree of freedom maneuvering solution based on the high-level instructions provided by openMNGR. Several configuration files are required by the openCMD application to configure communication channels, application execution parameters, and the profiles for the individual degrees of freedom.

The openCMD configuration files are contained in /usr/local/bin/opencmd_config.

Operators should typically have no reason to modify these configuration files.

Category: <u>Reference - OPENSEA</u> [1] Article ID: 51

Source URL: http://localhost:8888/kb2017/opencmd-configuration

Links

[1] http://localhost:8888/kb2017/main-categories/reference-opensea