

openCMD Controller Gain Configuration

To live reconfigure the openCMD controller gains you can send a pcomms message on the channel:

```
OPENCMD_PCOMMS_CMD
```

with the pcomms message set as:

```
pcomms_data.num_digitals = 1;  
pcomms_data.digitals.resize(pcomms_data.num_digitals);  
pcomms_data.digitals[0].name = "U_RECONFIGURE_CTRL";  
pcomms_data.digitals[0].value = true;
```

This will reread the controller configuration file.

Article ID: 118

Source URL: <http://localhost:8888/kb2017/opencmd-controller-gain-configuration>