



# Lodestar Subsea AHRS

## QUICK START GUIDE

### INSTRUCTIONS:

Install Lodestar configuration software on PC, then follow the numbered steps (in the coloured circles) to connect to and then configure the Lodestar for AHRS use. See the **Key** for explanation of which steps are required or optional.

Refer to the following manuals on the supplied documentation CD for further instructions:

- Lodestar Hardware
- Lodestar AHRS Operation
- Lodestar AHRS Messages

**Key**

- Required step for **ALL** operation
- Required step for **SERIAL** operation
- Required step for **ETHERNET** operation
- Optional step for **GPS** compensation

**START**

**1**

Connect power to the CONSOLE cable (P/N 8084-136).

Using Console Test Cable? Check BLUE pins are connected.

**2**

Connect the CONSOLE cable (P/N 8084-136) to the serial port of a PC. Connect the cable to Lodestar's CONSOLE port (CP).

**3**

Connect the COMMS cable (P/N 8084-137) to the Lodestar C1 port. This port will provide the primary AHRS output

**5**

Connect the ETHERNET cable (P/N 8084-138) to the Lodestar C2 port. This port will provide input and output

**4**

Connect the GPS input cable to T1 port with TCVR cable (P/N 820-139)

**6**

Power Lodestar, wait 1 minute....

**7**

Start configuration software on the PC

**8**

Press **Configure** button to set-up connection and connect to Lodestar

**9**

Enter **Default Latitude** on **Gyro-Compass** tab, press **Apply**

**10**

Configure output on **C1** port tab, press **Apply**

**11**

Configure output on **Ethernet E1** port tab, press **Apply**

**12**

Configure **GPS Compensation** on **Gyro-Compass** tab, press **Apply**

**13**

Having made changes press **Full Reset**.

